



Fitting Instructions – Bosch Micro Edge Refills

Disassembly

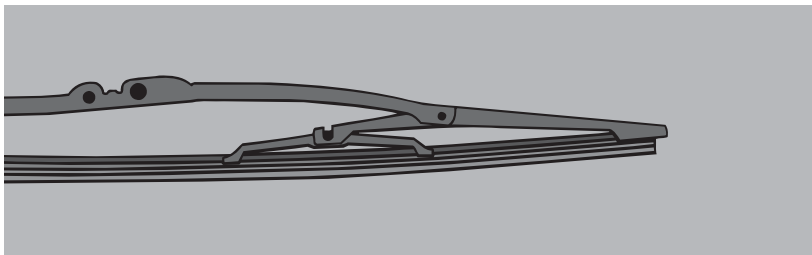


1.

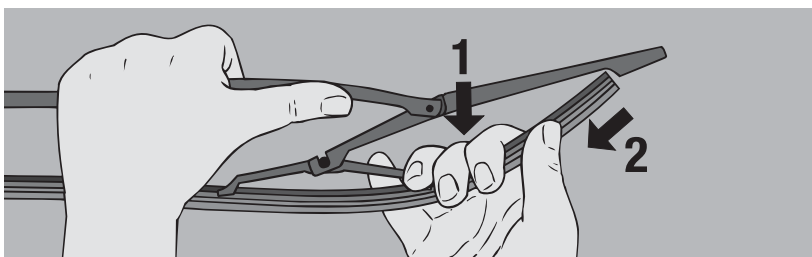


2.


Assembly

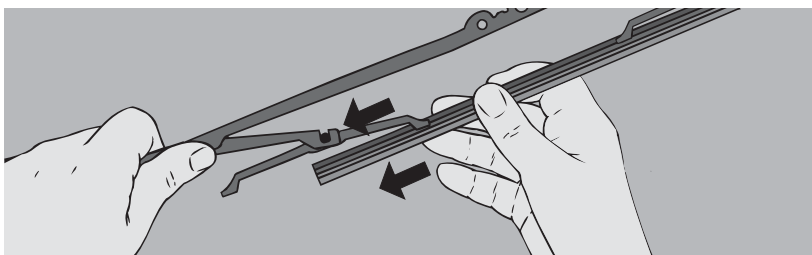

1.

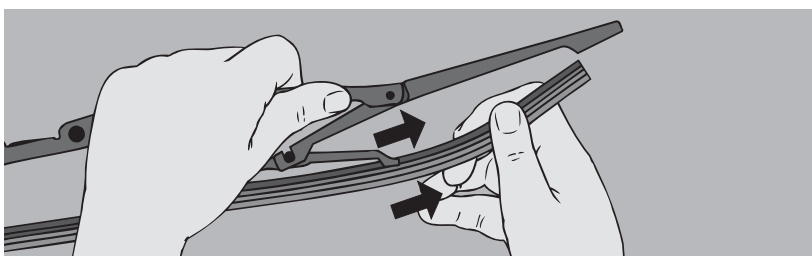

2.

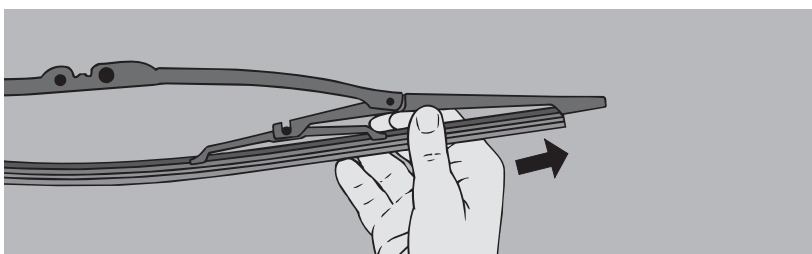

3.

Note: A common cause of noisy wiper refills is an excessively worn or faulty blade assembly. We recommend you replace your wiper refills every 6 months and your wiper blades every 3 years.



BOSCH

Invented for life