



Fitting Instructions – Bosch Micro Edge Wiper Blades

Disassembly

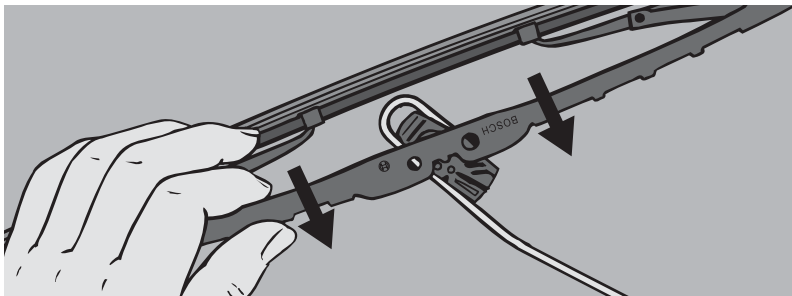


1.

Assembly

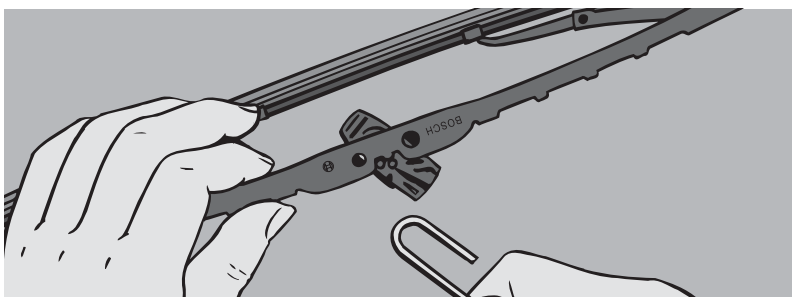

1.

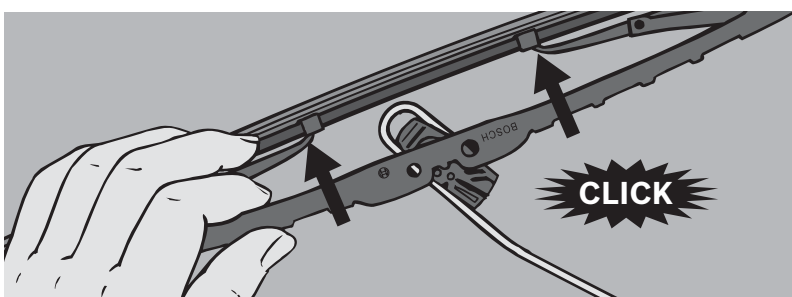

2.

Note: A common cause of noisy wiper refills is an excessively worn or faulty blade assembly. We recommend you replace your wiper refills every 6 months and your wiper blades every 3 years.



BOSCH

Invented for life