



Fitting Instructions – Bosch Refill BMN 610


1. Remove old refill from blade.
 - a) For “captive end” refills, remove existing wiper refills by gripping captive end of refill firmly and pull open end clip.
 - b) When end clip is open, slide blade claw forward and locate into captive end. Close and snap clip closed.

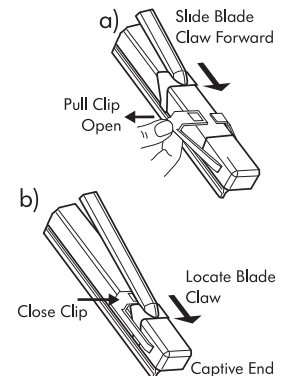


2. Measure old refill with new. If new refill needs to be shortened, snap rails off to length as required. (The metal rails are notched at 25mm intervals at one end.) The refill can be further trimmed with sharp side cutters. Note: Refill should overhang the end of the blade by at least 12 mm.

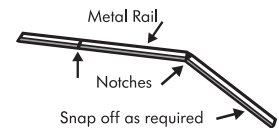

3. Slide black plastic clip from refill and discard. Starting at the end which will be positioned under the wiper arm, feed the refill into blade harness ensuring refill passes through each blade claw on both sides.

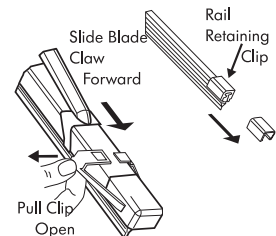

4. Slide refill until final claw touches plastic end cap. Note: you will need to spread locking claws. Align arm with opening and snap together, locking the claw in the cap. Check installation to ensure locking arms are fully engaged.

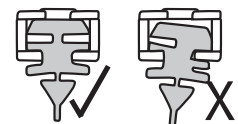

Note: A common cause of noisy wiper refills is an excessively worn or faulty blade assembly. We recommend you replace your wiper refills every 6 months and your wiper blades every 3 years.



BOSCH
Invented for life